



Setup Code list for DirecTV RC71H Remote Control

****Note:** In order to program the RC71H remote control; Press and hold “Select” & “Mute” keys for 3 seconds (until the visible green LED blinks twice) → Press the first digit of the code → Wait for 2 green LED blinks → Press the rest of the code. If a valid code has been entered, the green LED will blink twice.

Setup Codes For Audio - Accessory (M)

ZVOX 32332, 32334

Setup Codes For Satellite Set Top Box (S)

DirecTV 00001, 00002, 00003, 00004,
00005, 00006, 00007, 00008,
Hughes Network Systems 00001
Humax 00001
Qwest 00001
Samsung 00001

--- SAT/PVR Combination (S) ---

DirecTV 00001, 00002, 00003, 00004,
00005, 00006, 00007, 00008,
Humax 00001
Samsung 00001

Setup Codes For Television (T)

Aaxa 13634
Acer 11339
Admiral 10093, 10463, 10179
Advent 11570
Affinity 13577, 13716, 13717
Aiwa 11362, 11916
Akai 10702, 11675, 10765, 10672,
11207, 11385, 11688, 11690,
11692, 11903, 11935, 12232
Akura 11498
Alaron 10179
Albatron 10700
America Action 10180
Anam 10180
AOC 11589, 12087, 11089, 11365,
11590, 12014, 12402, 12621,
13707
Aomni 11623



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Apex Digital | 12397, 10748, 10765, 10890, |
| 11217, 11943 | |
| Astar | 11531 |
| Asus | 13340 |
| Audiosonic | 11675 |
| Audiovox | 11564, 10451, 10180, 13410, |
| 13065, 12513, 12413, 12121, | |
| 11769, 11766, 11276, 10875, | 11951, 11937, 11868, 11865, |
| | 10846, 10802, 10623 |
| Auria | 12087, 12277 |
| Aventura | 10171 |
| Axion | 11937 |
| Bang & Olufsen | 11620 |
| Bell & Howell | 10154 |
| BenQ | 11756, 11315, 11562 |
| Berkshire | 10047 |
| Bradford | 10180 |
| Broksonic | 10463, 11911, 11935, 11938 |
| Byd:sign | 11311 |
| Candle | 10186 |
| Carver | 10054 |
| CCE | 10623 |
| Celera | 10765 |
| Champion | 11362 |
| Changhong | 10765 |
| Citizen | 10060, 10186, 11672, 11935 |
| Clarion | 10180 |
| Claris | 13807 |
| Coby | 13478, 13646, 13629, 13627, |
| 13493, 13202, 12560, 12348, | |
| 12326, 12315, 12314, 12306, | 12347, 12344, 12340, 12338, |
| | 12017, 11634, 11538 |
| Commercial Solutions | 11447, 10047 |
| Conia | 11498 |
| Contec | 10180 |
| Cornea | 13677 |
| Craig | 10180, 13423 |
| Crosley | 10054, 13115 |
| Crown | 10180 |
| CTX | 10700 |
| Curtis | 12397, 11326, 12352, 12466, |
| 12855, 12859, 13228, 13577, | |
| | 13636, 13895, 13939 |
| Curtis Mathes | 10702, 10054, 10093, 10060, |
| 10047, 10154, 10451, 10145, | |
| | 11661, 11347, 11959 |
| CXC | 10180 |
| Cytron | 11326 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Daewoo | 10154, 10451, 11661, 10623, |
| 10661, 10672, 13115 | |
| Dell | 11264, 11863 |
| Denon | 10145 |
| Digital Lifestyles | 11765, 11822 |
| Disney | 11665, 11892 |
| Dumont | 10017 |
| Durabrand | 10178, 10171, 10463, 10180, |
| 11463, 11570, 11595, 11665 | |
| Dynex | 12049, 11463, 12184 |
| Electric Mirror | 13166 |
| Electrograph | 11755, 11623 |
| Electrohome | 10463, 11570, 11670, 11672 |
| Electron | 12855 |
| Element | 11886, 12183, 12964, 13559 |
| Elite | 13867 |
| Emerson | 11864, 11394, 11886, 10178, |
| 10171, 10154, 10451, 10463, | |
| | 10180, 11661, 11595, 11665, |
| 10623, 10179, 11911, 11913, | |
| | 11944, 11963, 12183, 13559 |
| Emprex | 11422, 11765 |
| Envision | 11589, 12087, 11365, 12014 |
| Epson | 11122 |
| ESA | 10171, 11595, 11944, 11963 |
| Fisher | 10154, 11362 |
| Fluid | 12964 |
| Fujimaro | 11498 |
| Fujitsu | 10809, 10179, 10186, 10853 |
| Fujitsu Siemens | 10809 |
| Funai | 11394, 10171, 10180, 10179, |
| 11271, 11904, 11913, 11963 | |
| Futuretech | 10180 |
| Gateway | 11756, 11755 |
| GE | 11447, 10178, 10047, 10051, |
| 10451, 10765, 11347, 11547, | |
| | 11917 |
| GFM | 11864, 11886, 10171, 11665, |
| 11963 | |
| Gibraltar | 10017 |
| GoldStar | 10178 |
| GPX | 10179, 12617, 12784, 13402 |
| Grunpy | 10180, 10179 |
| H & B | 11366 |
| Haier | 11753, 11749, 11748, 11570, |
| 12293, 12309, 12494, 12690, | |
| | 13204, 13382 |
| Hallmark | 10178 |
| Hanns.G | 11783 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Hannspree | 11348, 11351, 11352, 11745, |
| 11783, 12786 | |
| Harley Davidson | 10179, 11904 |
| Harman/Kardon | 10054 |
| Harvard | 10180 |
| Havermy | 10093 |
| Helios | 10865 |
| Hello Kitty | 10451 |
| Hewlett Packard | 11642, 11494, 11089, 13126 |
| Hidear | 13817 |
| Hisense | 10748, 11314, 11660, 12183, |
| 13519 | |
| Hitachi | 11643, 10145, 10679, 10797, |
| 11484, 11576, 11904, 12207, | |
| | 12756 |
| Hyundai | 11219, 13418 |
| iLo | 11394, 11463, 11286, 11603, |
| 11665, 11684, 11990, 13149 | |
| Infinity | 10054 |
| InFocus | 11366 |
| Initial | 11603, 11990 |
| Insignia | 12049, 11423, 11564, 10171, |
| 10463, 12751, 12432, 12417, | |
| | 12184, 12088, 12002, 11963, |
| 11892, 11660, 11641, 11517, | |
| | 11385, 11326, 11204 |
| Inteq | 10017 |
| iRIS | 12189 |
| iSymphony | 13094, 13118, 13382 |
| JBL | 10054 |
| JCM | 12189, 12256 |
| Jensen | 11299, 11326, 12541, 13204 |
| JVC | 11601, 12271, 12264, 10650, |
| 11774, 10463, 10731, 11253, | |
| | 11352, 11670, 11923, 12321, |
| 13650, 13854 | |
| KDS | 11498 |
| KEC | 10180 |
| Kingston | 13284 |
| Klegg | 11366 |
| KLH | 10765 |
| Konka | 11385 |
| Kost | 11483 |
| KTV | 10180 |
| Lasonic | 13198 |
| LG | 11423, 12358, 12731, 12424, |
| 12834, 10178, 10017, 11265, | |
| | 10700, 12612, 12864, 13941 |
| Lloyd's | 11904 |
| LodgingStar | 13147 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| LXI | 10156, 10054, 10178, 10047, |
| 10154 | |
| MAG | 11498 |
| Magnasonic | 11913 |
| Magnavox | 11867, 11454, 11455, 12597, |
| 12372, 11755, 10054, 10171, | |
| | 10051, 10706, 13292, 12492, |
| 10179, 11990, 11963, 11944, | |
| | 11931, 11913, 11904, 10186, |
| 11856, 10230, 10802, 11365, | |
| | 11198, 11054, 11012 |
| Marantz | 11454, 10054, 10704, 11054, |
| 11154, 11398, 11714 | |
| Matsushita | 10250, 10650 |
| Maxent | 11755, 11714, 11757 |
| MB Quart | 11868 |
| Megapower | 10700 |
| Megatron | 10178, 10145 |
| Memorex | 10178, 10154, 10463, 10150, |
| 10179, 11570, 11665, 11670, | |
| | 11892, 11903, 11911, 11924, |
| 11927, 11938, 12739 | |
| MGA | 10178, 10150 |
| Midland | 10047, 10017, 10051 |
| Mintek | 11603, 11990 |
| Mitsubishi | 11250, 10093, 10178, 10150, |
| 11797, 11917 | |
| Monivision | 10700 |
| Motorola | 10093 |
| MTC | 10060 |
| Multitech | 10180 |
| Mx Onda | 11498 |
| NAD | 10156, 11156, 10178 |
| Naxa | 12104, 12735, 13154, 13382 |
| NEC | 10704, 11398, 11704, 11797, |
| 12293, 13257 | |
| NetTV | 11755 |
| Nexus Electronics | 12183 |
| Nikko | 10178 |
| Nimbro | 12104 |
| Norcent | 11589, 10748, 11089, 11365, |
| 11590, 11591, 11745 | |
| Norwood Micro | 11286 |
| NuVision | 11657, 12158 |
| Ölevia | 11610, 11144, 11240, 11331 |
| Onwa | 10180 |
| Optimus | 10250, 10650, 10154, 11913, |
| 11924, 11927 | |
| Optique | 12189 |
| Optoma | 11348 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Optonica | 10093 |
| Orion | 10463, 11463, 10179, 11911, |
| 11938, 13540 | |
| Otic | 11498 |
| Panasonic | 11480, 10250, 11291, 12264, |
| 10650, 10051, 11271, 11924, | |
| | 11927, 11941, 11946, 11947, |
| 12240, 12654 | |
| PARK | 11376, 12104, 12194, 12202 |
| Penney | 10156, 10178, 10060, 10047, |
| 10051, 11347 | |
| Philco | 11394, 10054, 10171, 10179, |
| 11271, 11665, 11963 | |
| Philips | 11867, 11454, 11455, 11744, |
| 12597, 12372, 11394, 10054, | |
| | 10171, 13565, 13292, 12740, |
| 12665, 12652, 12492, 11990, | |
| | 11961, 11944, 11856, 11483, |
| 11365, 11154, 11054, 11012, | |
| | 10230 |
| Pioneer | 11457, 10679, 11260, 11398, |
| 12240, 13254 | |
| Planar | 11589 |
| Polaroid | 11523, 11498, 10765, 11276, |
| 11286, 11314, 11316, 11326, | |
| | 11385, 10865, 11538, 11762, |
| 11766, 11767, 11769, 11826, | |
| | 12002, 12121 |
| Portland | 10451, 11661 |
| Power Acoustik | 11865 |
| Prima | 11753, 11749 |
| Princeton | 10700 |
| Prism | 10051 |
| Proscan | 11447, 10047, 11347, 12147, |
| 12183, 12256, 13382, 13577, | |
| | 13717 |
| Proton | 10178 |
| Proview | 11498 |
| Pulsar | 10017 |
| Pyle | 12196, 12641 |
| Quasar | 10250, 11291, 10650, 10051, |
| 11924, 11927 | |
| RadioShack | 10178, 10047, 10154, 10180, |
| 11904 | |
| RCA | 11447, 12434, 12746, 12932, |
| 12187, 10093, 10047, 10051, | |
| | 11661, 13938, 13717, 13577, |
| 13382, 13147, 12855, 12183, | |
| | 12002, 11959, 11958, 11917, |
| 11868, 11781, 11547, 11385, | |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| | 11347, 10679, 10090 |
| Realistic | 10178, 10154, 10180 |
| RevolutionHD | 11623 |
| Runco | 10017, 11398 |
| Sampo | 11755 |
| Samsung | 10702, 10650, 10178, 10060, |
| 10766, 10814, 11060, 11235, | 11267, 11903, 11959, 12596, |
| 12733, 12814 | |
| Sansui | 10171, 10463, 11463, 11409, |
| 11670, 11892, 11904, 11911, | 11935, 11938, 13540, 13564 |
| | 11142, 10054, 10154, 10088, |
| Sanyo | |
| 11362 | |
| Sceptre | 10878, 11217, 11360, 11599, |
| 12337, 12506, 12528 | |
| Scotch | 10178 |
| Scott | 10178, 10180, 10179, 11711 |
| Sears | 10156, 10054, 10178, 10047, |
| 10171, 10154, 10179, 11904 | |
| Seiki | 10178, 12964, 13559, 13560, |
| 13953 | |
| Seleco | 11351 |
| Sens | 11865 |
| Sharp | 12360, 10818, 10093, 11393, |
| 11917, 12402, 13867 | |
| Sheng Chia | 10093 |
| Sherwood | 11399, 13061 |
| Sigmac | 13423, 13477 |
| Signature | 10054 |
| Silo Digital | 13794 |
| Simpson | 10186 |
| Skyworth | 11799, 13253 |
| Solé | 11366, 11483, 11623 |
| Sony | 11300, 11317, 11685, 11786, |
| 11791, 11904, 12736 | |
| Soundesign | 10178, 10180, 10179, 10186 |
| Soyo | 11520, 11826 |
| Spectroniq | 11498 |
| Squareview | 10171 |
| SSS | 10180 |
| Starlite | 10180 |
| SunBriteTV | 11610, 11420, 11435, 12337, |
| 12528, 12925, 12935 | |
| Superscan | 10864, 10093, 11944 |
| Supersonic | 11753, 12104, 12784, 13154, |
| 13204, 13593, 13595, 13877, | |
| | 13894 |
| SVA | 10748, 10865, 11963 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Sylvania | 11864, 11394, 11886, 10054, |
| 10171, 11271, 11314, 11595, | |
| | 11665, 11913, 11931, 11944, |
| 11963 | |
| Symphonic | 11394, 10171, 10180, 11595, |
| 11904, 11913, 11944 | |
| Syntax | 11610, 11144, 11240, 11331 |
| TAG | 13498 |
| Tandy | 10093 |
| Tatung | 11756, 11286 |
| TCL | 12434 |
| Technics | 10250, 10051 |
| Technol Ace | 10179 |
| Techwood | 10051 |
| Teknika | 10054, 10060, 10180, 10150, |
| 10179, 10186 | |
| Telefunken | 10702 |
| Thomas America | 11904 |
| TMK | 10178 |
| TNCi | 10017 |
| Toshiba | 11524, 11656, 10156, 11156, |
| 11256, 11936, 12006, 10650, | |
| | 10060, 10154, 11265, 11369, |
| 11343, 11704, 11916, 11935, | |
| | 11945, 11959, 12667, 12684 |
| Toshinaer | 13576 |
| TruTech | 11665, 11723, 12066 |
| TVS | 10463 |
| US Logic | 11286 |
| Venturer | 11865, 11868 |
| Vidikron | 10054, 11398 |
| Vidtech | 10178 |
| Viewsonic | 12049, 10864, 11755, 11564, |
| 12087, 13706, 12839, 12745, | |
| | 12277, 12111, 12014, 11742, |
| 11627, 11578, 11542, 11365, | |
| | 11330, 10885, 10857, 10797 |
| Viore | 11207, 11684, 11811, 12104, |
| 12352, 13094, 13118, 13159, | |
| | 13382 |
| VisionQuest | 13380 |
| Vivitek | 11369 |
| VIZIO | 11758, 13758, 12757, 10864, |
| 11756, 10885 | |
| Vuon | 13418 |
| Wards | 10156, 11156, 10054, 10178, |
| 10060, 10047, 10154, 10017, | |
| | 10051, 10180, 10179, 10186, |
| 11347 | |
| Waycon | 10156 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Westinghouse | 11712, 13470, 13579, 12397, |
| 10451, 13949, 13908, 13382, | |
| | 13094, 12499, 12293, 12195, |
| 11577, 11300, 11282, 11217, | |
| | 10890, 10885 |
| White Westinghouse | 10463, 11661, 10623 |
| Wyse | 11365 |
| Yamaha | 10797, 11576 |
| Zenith | 11423, 12358, 12731, 10178, |
| 10047, 10017, 10463, 11265, | |
| | 10145, 11661, 11365, 11904, |
| 11911, 12612, 12742 | |
| --- 3D TV (T) --- | |
| Coby | 13478 |
| Dynex | 12049 |
| Elite | 13867 |
| Hisense | 13519 |
| LG | 11423, 12731, 12424, 11265 |
| Panasonic | 11480, 11941 |
| Sanyo | 11142 |
| Sceptre | 12337 |
| Sharp | 12360, 13867 |
| Toshiba | 11524 |
| VIZIO | 11758, 13758 |
| --- DLP (T) --- | |
| Audiovox | 11951 |
| Durabrand | 11665 |
| Hewlett Packard | 11494 |
| iLo | 11463 |
| LG | 11423, 11265 |
| Mitsubishi | 11250 |
| NuVision | 12158 |
| Orion | 11463 |
| Panasonic | 11480, 11291, 10650 |
| Philips | 11867 |
| RCA | 11447 |
| Samsung | 11060 |
| Sansui | 11463, 11892 |
| Toshiba | 11524, 11265 |
| Viore | 11811 |
| --- LCD (T) --- | |
| Acer | 11339 |
| Akai | 11675, 11385, 11688, 11692, |
| 11935, 12232 | |
| AOC | 11589, 12087, 11365, 12014, |
| 12402, 12621 | |
| Aomni | 11623 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Apex Digital | 12397, 10890, 11217 |
| Astar | 11531 |
| Asus | 13340 |
| Audiosonic | 11675 |
| Audiovox | 11564, 10180, 13410, 13065, |
| 12513, 12413, 12121, 11951, | |
| 11766, 11276, 10875, 10846, | 11937, 11868, 11865, 11769, |
| | 10802 |
| Auria | 12087, 12277 |
| BenQ | 11315, 11562 |
| Byd:sign | 11311 |
| Citizen | 11672, 11935 |
| Claris | 13807 |
| Coby | 13478, 13646, 13627, 13493, |
| 13202, 12560, 12348, 12344, | |
| 12314, 12306, 12017, 11634, | 12340, 12338, 12326, 12315, |
| | 11538 |
| Cornea | 13677 |
| Craig | 13423 |
| Crosley | 13115 |
| Curtis | 12397, 12352, 12466, 12855, |
| 12859, 13228, 13577, 13895 | |
| Dell | 11264, 11863 |
| Digital Lifestyles | 11765, 11822 |
| Dynex | 12049, 12184 |
| Electric Mirror | 13166 |
| Electrohome | 11672 |
| Electron | 12855 |
| Element | 11886, 12183, 12964, 13559 |
| Emerson | 11864, 11394, 11886, 10171, |
| 11963, 12183, 13559 | |
| Emprex | 11422, 11765 |
| Envision | 11589, 12087, 11365, 12014 |
| Epson | 11122 |
| Fluid | 12964 |
| Funai | 10171 |
| GFM | 11864, 11886 |
| GPX | 10179, 12617, 12784, 13402 |
| H & B | 11366 |
| Haier | 11753, 11749, 11748, 12293, |
| 12309, 12690, 13382 | |
| Hanns.G | 11783 |
| Hannspree | 11348, 11351, 11352, 11745, |
| 11783, 12786 | |
| Hewlett Packard | 11642, 11494, 13126 |
| Hidear | 13817 |
| Hisense | 11314, 11660, 12183, 13519 |
| Hitachi | 11643, 11576, 12207, 12756 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Hyundai | 11219, 13418 |
| iLo | 11394, 11286, 11603, 11684, |
| 11990, 13149 | |
| InFocus | 11366 |
| Initial | 11603, 11990 |
| Insignia | 12049, 11564, 11204, 11517, |
| 12002, 12184, 12417, 12751 | |
| iRIS | 12189 |
| iSymphony | 13094, 13118, 13382 |
| JCM | 12189, 12256 |
| Jensen | 11299, 12541, 13204 |
| JVC | 11601, 12271, 11774, 11253, |
| 11670, 12321, 13650, 13854 | |
| Kingston | 13284 |
| Klegg | 11366 |
| Kost | 11483 |
| Lasonic | 13198 |
| LG | 11423, 12358, 12731, 12424, |
| 12834, 10178, 11265, 12864 | |
| LodgingStar | 13147 |
| Magnavox | 11455, 12372, 10802, 11012, |
| 11198, 11365, 11944, 11990, | |
| | 13292 |
| Marantz | 11454 |
| Maxent | 11755, 11714, 11757 |
| MB Quart | 11868 |
| Memorex | 10179, 11570, 11670, 11892, |
| 12739 | |
| Mintek | 11603, 11990 |
| Mitsubishi | 11250, 10150, 11797 |
| Naxa | 12104, 12735, 13154, 13382 |
| NEC | 11398, 11797, 12293, 13257 |
| Nexus Electronics | 12183 |
| Norcent | 11589, 11089, 11365, 11591, |
| 11745 | |
| Norwood Micro | 11286 |
| NuVision | 11657, 12158 |
| Ölevia | 11610, 11144, 11240, 11331 |
| Optique | 12189 |
| Orion | 13540 |
| Panasonic | 11480, 11291, 10650, 11941 |
| PARK | 12104, 12194, 12202 |
| Philco | 11394, 10171, 11963 |
| Philips | 11867, 11454, 11455, 11744, |
| 12372, 10230, 11483, 11856, | |
| | 13292, 13565 |
| Pioneer | 11260 |
| Planar | 11589 |
| Polaroid | 11523, 11498, 11276, 11314, |
| 11316, 11538, 11762, 11766, | |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Prima | 11767, 11769, 12121 |
| Proscan | 11753, 11749 |
| 13577 | 12147, 12183, 12256, 13382, |
| Pyle | 12196, 12641 |
| RCA | 11447, 12434, 12746, 12932, |
| 12187, 10047, 11781, 11868, | 11958, 12183, 12855, 13382, |
| 13577, 13938 | |
| RevolutionHD | 11623 |
| Sampo | 11755 |
| Samsung | 10702, 10766, 10814, 11235, |
| 12596, 12733, 12814 | |
| Sansui | 11409, 11670, 11892, 11935, |
| 13540, 13564 | |
| Sanyo | 11142, 11362 |
| Sceptre | 10878, 11217, 11360, 11599, |
| 12337, 12506, 12528 | |
| Scott | 11711 |
| Seiki | 10178, 12964, 13559, 13560, |
| 13953 | |
| Sens | 11865 |
| Sharp | 12360, 10818, 10093, 11393, |
| 12402 | |
| Sherwood | 11399, 13061 |
| Sigmac | 13477 |
| Silo Digital | 13794 |
| Skyworth | 11799, 13253 |
| Solé | 11366, 11483, 11623 |
| Sony | 11317, 11685, 11786, 11791, |
| 12736 | |
| Soyo | 11520, 11826 |
| SunBriteTV | 11610, 11420, 11435, 12337, |
| 12528, 12925, 12935 | |
| Superscan | 10864 |
| Supersonic | 12104, 12784, 13154, 13204, |
| 13593, 13595, 13877, 13894 | |
| SVA | 11963 |
| Sylvania | 11864, 11394, 11886, 10171, |
| 11271, 11314, 11963 | |
| Symphonic | 11394, 10171, 11595 |
| Syntax | 11610, 11144, 11240, 11331 |
| TAG | 13498 |
| Tatung | 11286 |
| TCL | 12434 |
| Toshiba | 11524, 11656, 10156, 11256, |
| 12006, 11343, 11935, 12667 | |
| Toshinaer | 13576 |
| TruTech | 11723 |
| US Logic | 11286 |



Setup Code list for DirecTV RC71H Remote Control

| | |
|--------------------------------|-----------------------------|
| Venturer | 11865, 11868 |
| Vidikron | 11398 |
| Viewsonic | 12049, 10864, 11564, 12087, |
| 10857, 10885, 11330, 11365, | 11542, 11578, 11627, 11742, |
| 12014, 12111, 12277, 12745 | |
| Viore | 11684, 11811, 12104, 12352, |
| 13094, 13118, 13159, 13382 | |
| VisionQuest | 13380 |
| Vivitek | 11369 |
| VIZIO | 11758, 13758, 12757, 10864, |
| 11756, 10885 | |
| Vuon | 13418 |
| Westinghouse | 11712, 13470, 13579, 12397, |
| 13949, 13908, 13382, 13094, | 12499, 12293, 12195, 11577, |
| 11300, 11282, 11217, 10890, | 10885 |
| | 11365 |
| Wyse | 11423, 10178, 10017, 11265, |
| Zenith | 11365, 12612, 12742 |
| | |
| --- TV/DVD Combination (T) --- | |
| Advent | 11570 |
| Affinity | 13717 |
| Akai | 11675, 11935, 12232 |
| Apex Digital | 10765, 11943 |
| Audiovox | 11766, 11865, 11868, 11937, |
| 11951, 12413, 12513, 13065, | 13410 |
| | 11937 |
| Axion | 10463, 11935 |
| Broksonic | 11935 |
| Citizen | 11538, 12314, 12315, 12340, |
| Coby | 13627 |
| 12344, 12347, 12560, 13202, | 12466, 12855, 13895 |
| | 10171 |
| Curtis | 12049, 12184 |
| Durabrand | 11670 |
| Dynex | 11864, 11394, 11886, 11963 |
| Electrohome | 11963 |
| Emerson | 11394, 11963 |
| ESA | 11963 |
| Funai | 12617, 12784 |
| GFM | 11753, 11749, 11748, 12309 |
| GPX | 13519 |
| Haier | 12207, 12756 |
| Hisense | 11990 |
| Hitachi | 11990 |
| iLo | |
| Initial | |



Setup Code list for DirecTV RC71H Remote Control

| | |
|-----------------------------|-----------------------------|
| Insignia | 12049, 11892, 11963, 12002, |
| 12417, 12751 | |
| iSymphony | 13094 |
| JVC | 12271, 11774, 11670, 13854 |
| LG | 11423 |
| Magnavox | 11454, 12372, 11944, 11963, |
| 11990 | |
| Maxent | 11714 |
| Memorex | 10463, 11670, 11911 |
| Mintek | 11603, 11990 |
| Naxa | 12104, 13382 |
| Nimbro | 12104 |
| Panasonic | 10051, 11924, 11927, 11941, |
| 11947, 12654 | |
| Philco | 11963 |
| Philips | 11454, 12372, 11394, 11961, |
| 12740 | |
| Polaroid | 11523, 11538, 11766, 11769, |
| 12002 | |
| Power Acoustik | 11865 |
| Prima | 11753 |
| Proscan | 12256 |
| Pyle | 12196 |
| RCA | 11447, 12746, 12932, 12187, |
| 10047, 11868, 11958, 12002, | |
| | 13382 |
| Samsung | 11903 |
| Sansui | 11670, 11935, 13564 |
| Sceptre | 12528 |
| Sens | 11865 |
| Sharp | 12360, 10818 |
| Skyworth | 11799, 13253 |
| Supersonic | 11753, 12104, 12784, 13593, |
| 13595, 13877, 13894 | |
| Sylvania | 11864, 11394, 11886, 10171, |
| 11944, 11963 | |
| Symphonic | 11595, 11944 |
| Toshiba | 11524, 11656, 11256, 12006, |
| 11935, 12667, 12684 | |
| TruTech | 12066 |
| Venturer | 11865, 11868 |
| Viewsonic | 12049, 10864 |
| Viore | 11811, 12104, 12352, 13094, |
| 13118, 13382 | |
| VisionQuest | 13380 |
| Westinghouse | 11712, 11300 |